

Make Scratched, Dirty CD Discs Play

1. Put a few drops of water on a lint-free cloth and gently wipe the disk (nonlabel side) in a straight line from its center to its edge.
2. Allow it to dry thoroughly.
3. Put it into the CD-Rom and try playing again.

If it still doesn't play and you really need the info, you might try using Memorex's CD-Rom Scratch Repair Kit www.memorex.com or Esprit Development's WipeOut www.cdrepair.com.

Revised 11/8/2011 JMM